



自动换梭部件（1）

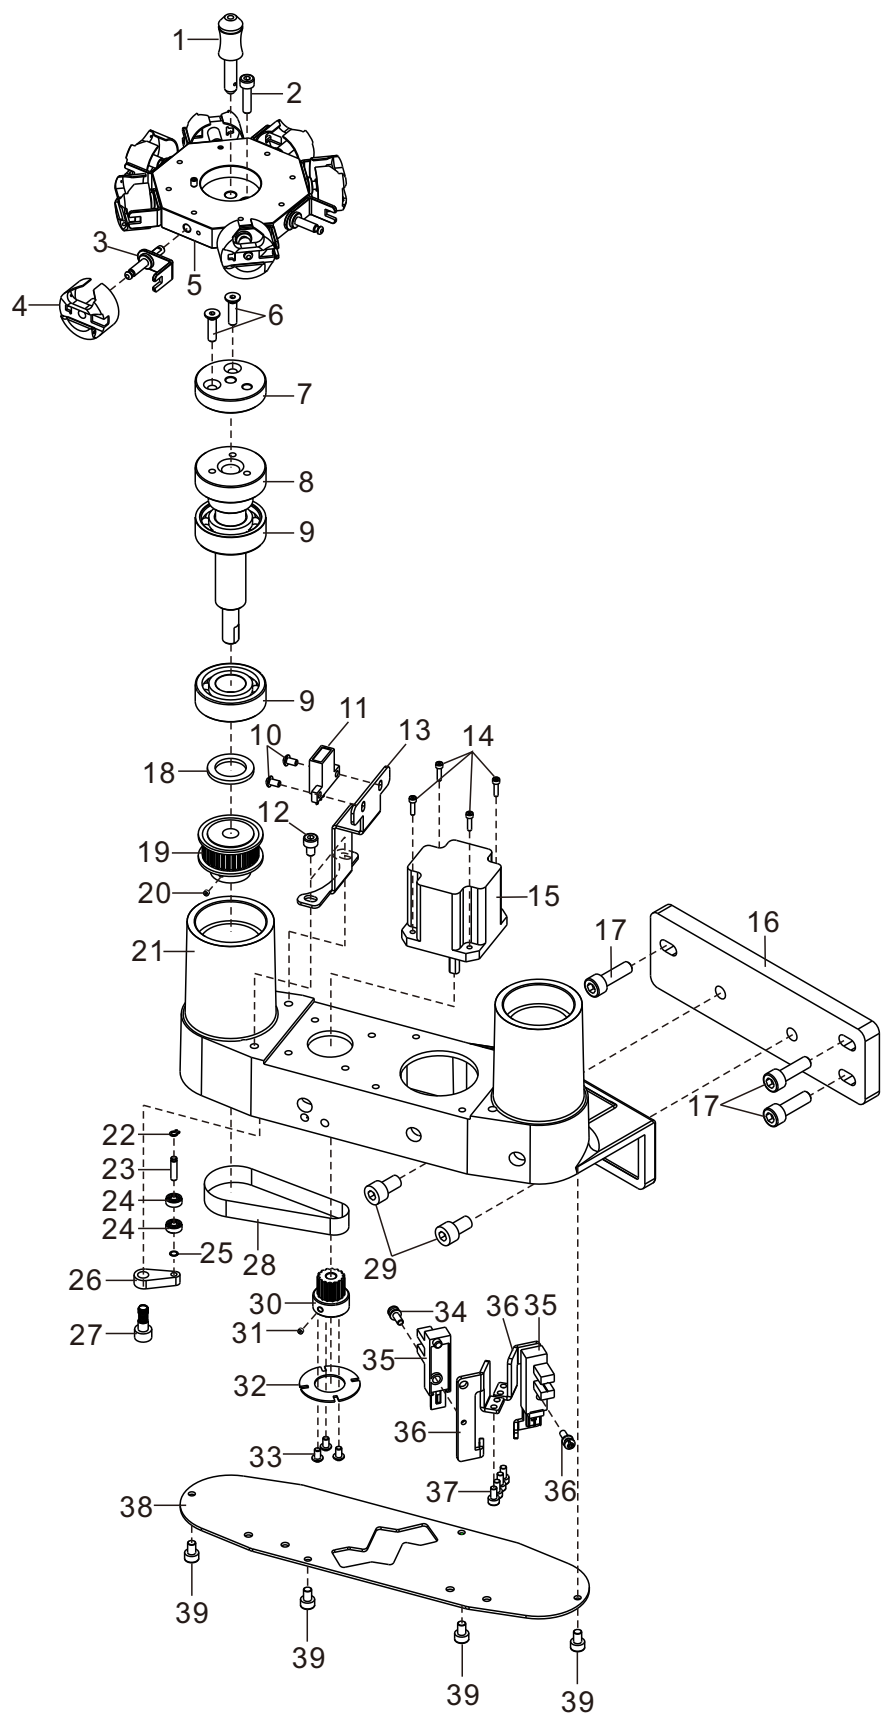

自动换梭部件		AUTOMATIC EXCHANGE BOBBIN COMPONENTS(1)		
序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1		梭芯库安装螺钉	SCREW	1
2	10000863	M4×12螺钉	SCREW M4 L=12	1
3	10050989	梭芯定位片装配体	BOBBIN CASE LOCATING PLATE	8
4	10039877	BC-DBM(1)-NBL1梭壳	BOBBIN CASE	8
5	10050962	八边形梭芯库	BOBBIN COLLECTOR	1
6	10051086	螺钉M4×16	SCREW M4 L=16	2
7	10050990	快换挡圈	QUICK CHANGE COLLAR	1
8	10050984	带轮轴	SHAFT	1
9	10025896	6202-2RZ_BOM轴承	BEARING	2
10	10000984	螺钉	SCREW M3 L=12	2
11	10053588	光电传感器SPY402	SENSOR	1
12	10003399	M4×8螺钉	SCREW M4 L=8	2
13	10050996	传感器架	SENSOR MOUNTING PLATE	1
14	10005692	M4×10螺钉	SCREW M4 L=10	4
15		17HS101电机	MOTOR	1
16	10050927	电机座调整板	ADJUSTING PLATE	1
17	10003158	M6×25螺钉	SCREW M6 L=25	3
18	10007241	推力球轴承挡圈	WASHER	1
19	10050926	S3M同步带轮30齿	SYNCHRONOUS PULLEY	1
20	10002896	M4×5螺钉 (GB/T 77-2000)	SCREW M4 L=5	2
21	10050931	联合电机座	MOUNTING BASE	1
22		轴用弹性挡圈—A型	RETAINER RING	1
23	10050933	张紧轮轴	SHAFT	2
24	10052173	换梭张紧轮轴承 619/3	BEARING	
25	10050935	垫圈A	WASHER A	1
26	10050932	张紧板	TENSION PLATE	1
27	10050924	张紧板轴位螺钉	SCREW	1
28	10050983	换梭同步带	SYNCHRONOUS BELT	1
29	10003093	M8×20螺钉	SCREW M8 L=20	2
30	10050929	电机带轮A	GEAR A	1
31	10002853	M3×4螺钉 (GB/T 77-2000)	SCREW M3 L=4	2
32	10051866	传感片	SENSOR PAD	1
33	10000743	M2.5×4外盖螺钉	SCREW M2.5 L=4	3
34	10003096	M3×10螺钉	SCREW M3 L=10	1
35		传感器	SENSOR	1
36	10050996	传感器架	SENSOR MOUNTING PLATE	2
37	10003096	M3×10螺钉	SCREW M3 L=10	4
38	10050973	盖板	COVER PLATE	1
39	10003399	M4×8螺钉	SCREW M4 L=8	4

自动换梭部件（2）

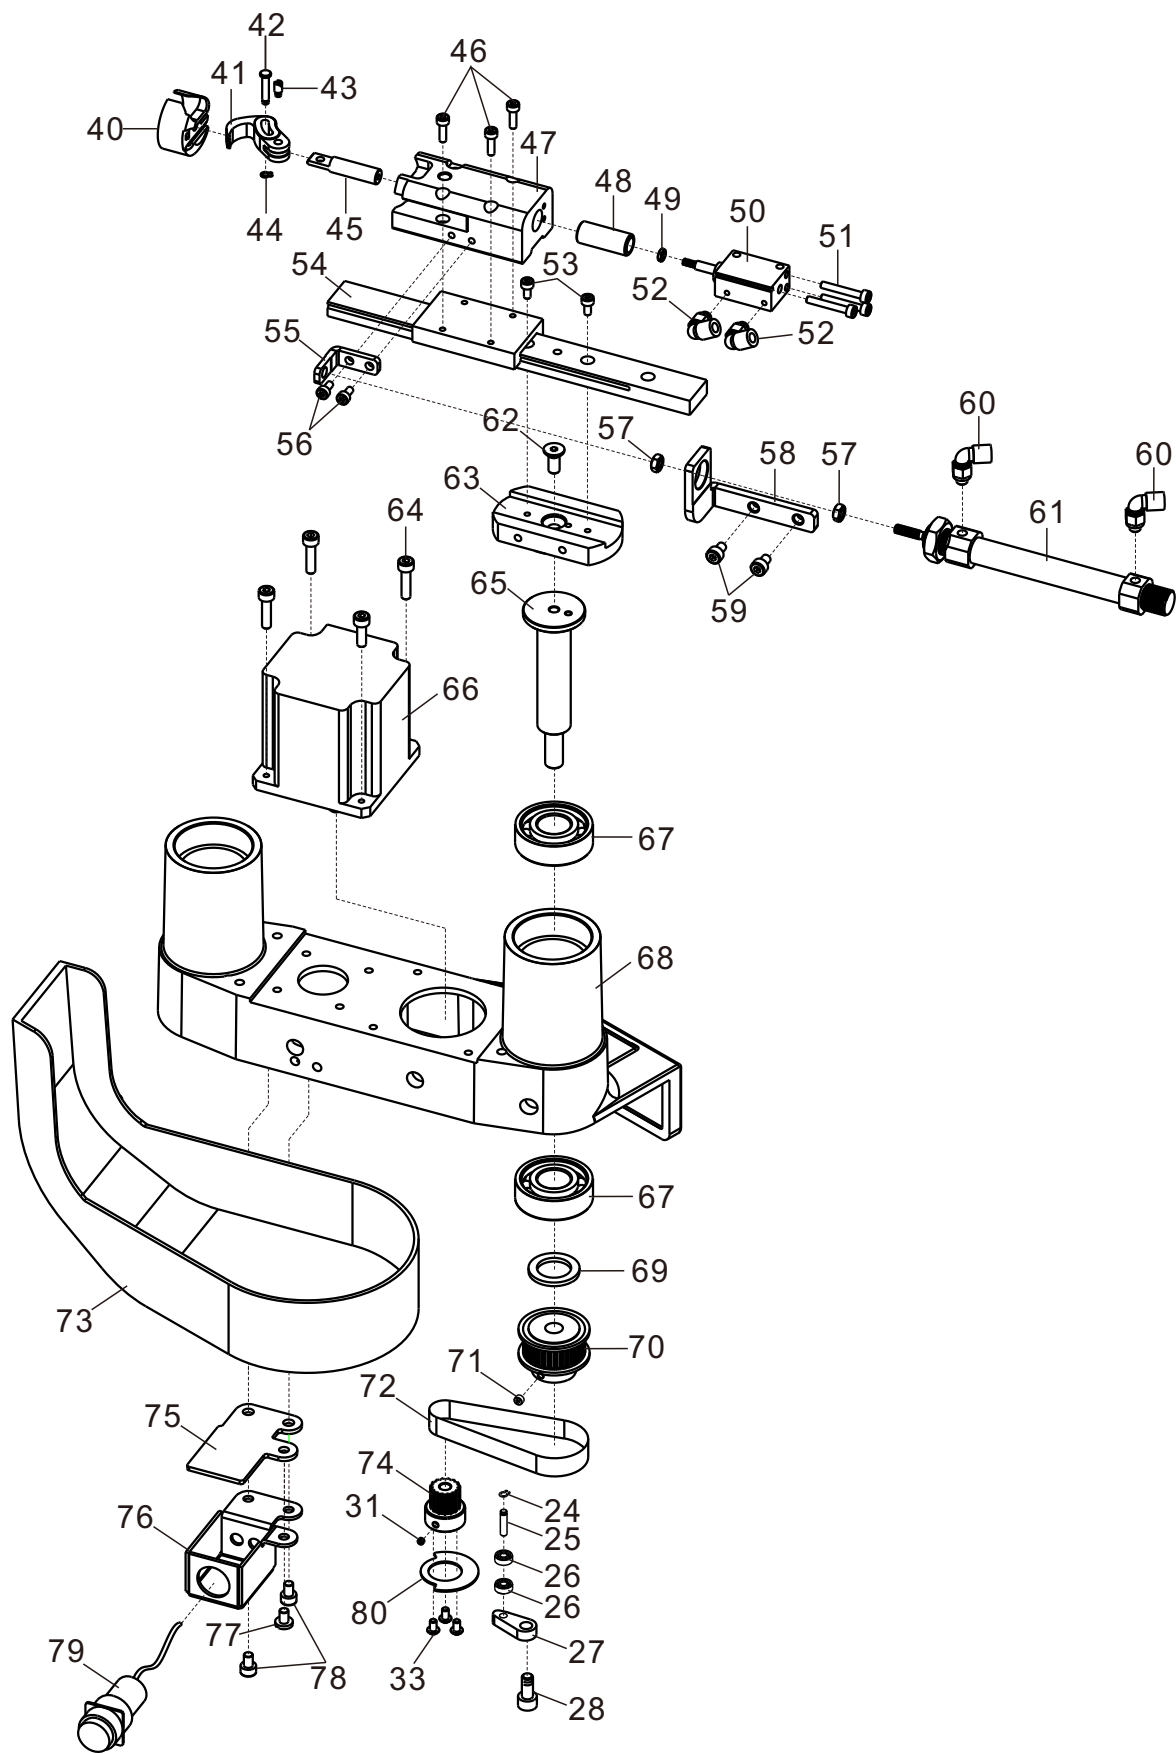

自动换梭部件		AUTOMATIC EXCHANGE BOBBIN COMPONENTS (2)		
序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
40	10039877	BC-DBM(1)-NBL1梭壳	BOBBIN CASE	1
41	10050961	分离爪	SEPARATION CLAW	1
42	10050963	销轴	PIN	1
43	10050963	轴位螺钉	SCREW	1
44	10003245	开口挡圈	E-RING	1
45	10050992	驱动轴	DRIVING SHAFT	1
46	10003096	M3×10螺钉	SCREW M3 L=10	3
47	10050940	驱动轴安装座装配体	DRIVING SHAFT FIXED BASE	1
48	10050993	铜套	COPPER BUSH	1
49	10003018	M3螺母	NUT M3	1
50	10050942	小气缸	AIR CYLINDER	1
51	10051084	螺钉M3×35	SCREW M3 L=35	3
52	10048232	气缸接头	CYLINDER JOINT	2
53	10009553	M3×8螺钉	SCREW M3 L=8	2
54	10050975	直线导轨	LINEAR RAIL	1
55	10050995	连接板	CONNECTING PAD	1
56	10003096	M3×10螺钉	SCREW M3 L=10	2
57	10009471	M4螺母	NUT M4	2
58	10050994	笔形气缸固定座	CYLINDER MOUNTING BASE	1
59	10003399	M4×8螺钉	SCREW M4 L=8	2
60	10007681	气管接头	JOINT	2
61	10050941	笔形气缸	AIR CYLINDER	1
62	10051085	螺钉M5×14	SCREW M5 L=14	1
63	10050985	导轨安装座	LINEAR RAIL MOUNTING BASE	1
64	10000863	M4×12螺钉	SCREW M3 L=10	4
65	10050928	换梭带轮轴	SHAFT	1
66		电机57BYG350A	MOTOR	1
67	10025896	轴承	BEARING	2
68	10050931	联合电机座	MOTOR MOUNTING BASE	1
69	10007241	推力球轴承挡圈	THRUST COLLAR	1
70	10050926	S3M同步带轮30齿	SYNCHRONOUS PULLEY	1
71	10002896	M4×5螺钉 (GB/T 77-2000)	SCREW M4 L=5	2
72	10050983	换梭同步带	SYNCHRONOUS BELT	1
73		梭壳收纳盒	BOBBIN CASE COLLECTOR	1
74	10050930	电机带轮B	GEAR B	1
75	20010435	急停开关安装板(喷漆件)	SWITCH MOUNTING PLATE	1
76	20010434	急停开关盒	SWITCH BOX	1
77	10009595	M4×4.5螺钉	SCREW M4 L=4.5	1
78	10003399	M4×8螺钉	SCREW M4 L=8	2
79	10028708	急停开关	STOP SWITCH	1
80	10051005	传感片	SENSOR CHIP	1